


How to install the adaptors

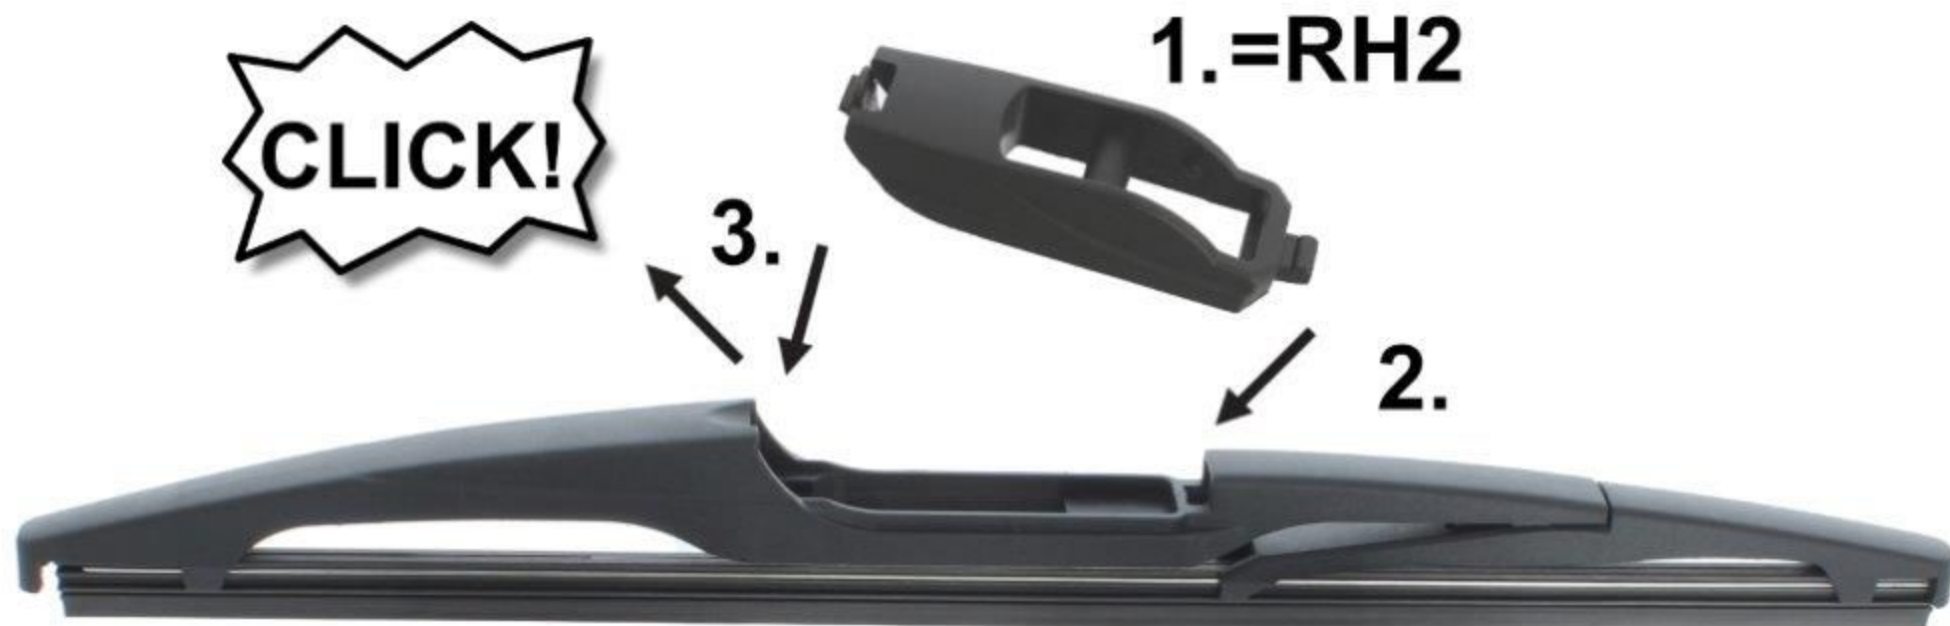

1. Select the adaptor for your vehicle.
2. Locate the adaptor to the rear of the blade.
3. Bring the front of the adaptor down until it clicks and locks in position.
4. You can now fit the blade to your vehicle.